

Change Direction Planes while routing pipe

Published Date: 06-01-2010

Applies to: Plant 3D

Challenge


How do you change directional planes while routing pipe?

Solution

There are actually three ways you can do this while you are in the Route Pipe command.

- Hold CTRL Key and right click with your mouse
- Right click and select Plane
- Type P enter

Repeat any of these commands toggle through 3 different planes, the XY (plan), YZ (right), and ZX (front) planes and sets the origin to match the current routing location.

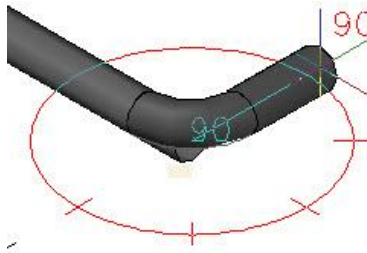

For more technical solutions visit www.ketiv.com/support or call 866.465.3848.